

Speedtouch 716 (WL) Wireless Broadband Router with VoIP

Starter Pack Contents:

- 1 x SpeedTouch 716v5 WL Wireless Router
- 1x Power Supply
- 1 x Telephone cable (black)
- 1 x USB cable (blue)
- 2 x RJ11 Adapters
- 2 x Microfilters
- 1x CD Setup Guide & Safety Instruction booklet



This guide will get you started quickly. You can find instructions that are more detailed on the accompanying Setup CD.

- 1 Attach the DSL cable. One end plugs into the grey-coloured port labelled “**DSL**” on your router, the other end plugs into one of the supplied microfilters.
- 2 Place the microfilter into your telephone socket. Any equipment displaced by the microfilter can be plugged into the extra “**phone**” socket in the microfilter.
- 3 Plug the Ethernet (yellow) cable into any of the 4 Ethernet ports, place the other end of the cable into your PC Ethernet port.
- 4 Connect the power adapter to the SpeedTouch 190 and then plug in the adapter to the nearest mains power socket.
- 5 Plug your telephone handset into one of the two green-coloured ports labelled “**Phone**”. You may need to use one of the RJ11 (white) adapters in order to connect your telephone to the router.
- 6 In order to use the telephone to make regular (not VoIP) calls you must connect the PSTN socket to the “**Phone**” socket on the microfilter. Without this cable attached you will not be able to make calls when the router is not powered.
- 7 Push in the “**ON/OFF**” button to turn on the router. The power light will indicate when the router is on, this may take a minute to finish.
- 8 The DSL light will flash green as the router attempts to connect to your broadband account. The DSL light will stop flashing when a connection is made.
- 9 Place the installation CD into your computer. You should be taken to the router’s built-in setup screens, through your web browser. This guide assumes that you will setup your broadband using an Ethernet connection. Your PC should be setup to “**obtain an IP address automatically**”.
- 10 If this does not occur, you can access the setup screens by opening your browser and going to either www.speedtouch.lan or <http://192.168.1.254>. Access to your router settings is password protected. By default the username is **Administrator**, the password is blank. You can change these later to secure your settings from tampering. Next select “**Setup**” from the “**Pick a task...**” menu.

